


Please note: We are a mail order distributor not a shop

## Power Pack Information for v5


Connect the power Pack as shown:

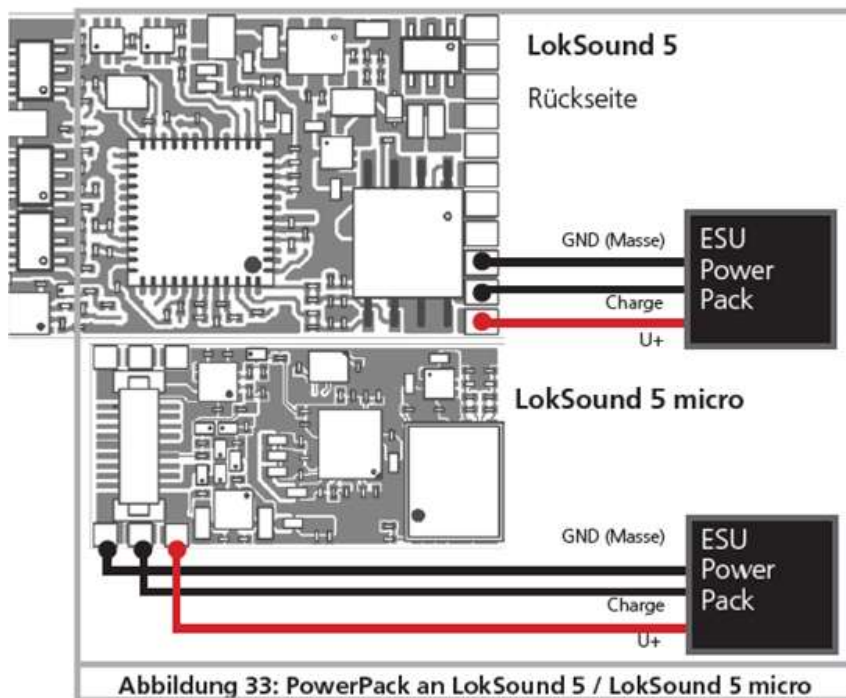

## Power Pack Set up

With the LS v5 you can use any AUX output for power pack control as follows:

You need to setup the Aux Output mode to **Power Pack control**.

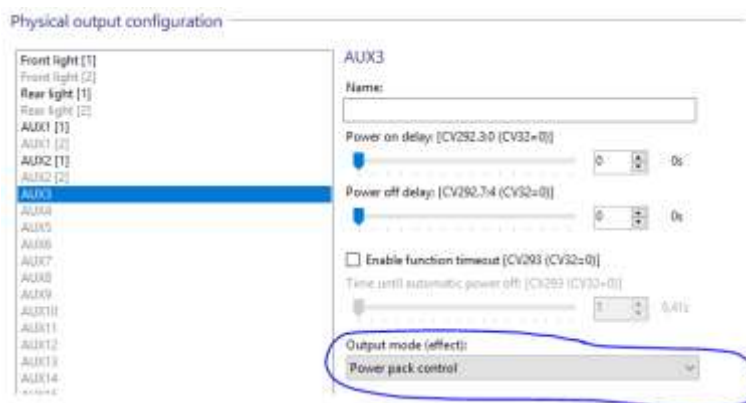

You don't need to function map it, it will work automatically.

Run time can be adjusted with CV 113 Default = 40 (0.66 sec) Max value = 255 (4.0sec)